

TIMKEN

Where You Turn

StatusCheck™ Quick Start Guide and Operators Manual



StatusCheck™ 2.4GHz

StatusCheck™ Quick Start Guide and Operators Manual

FCC Compliance Statement:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Disclaimer:

This manual is provided for information purposes. Timken makes no warranty of any kind with regard to this material. Timken will not be held liable for omissions or inconsistencies that may be found within this manual or for incidental or consequential damages in connection with this manual. Information in this manual is subject to change without notice. The information in this manual is not all-inclusive.

Product Support:

Should you have any questions regarding this material or items that were not covered in this manual please contact Timken's StatusCheck™ product support group at +1-330-471-3369.

In the event that you cannot solve a problem related to this product, technical help is available for those that purchased the product support package from Timken. Product support is available for one year

from date of purchase.

To best serve you please have the hardware serial numbers and software version of your system available and be prepared to explain the exact nature of the problem prior to calling.

Returns:

A Return Goods Authorization number is required for all product returns. Please call the Product Support Group at +1-330-471-3369 for an RGA# and return shipping instructions.

Internet:

www.timken.com

Software:

You have the non-exclusive right to use this software on only one device at a time. For network systems, you have the non-exclusive right to install this software on only one server per license purchased. Read/write access is limited to the number of licenses purchased.

Software upgrades will periodically be made available to the registered users. These upgrades will be free to registered users who have purchased the product support package that is offered with this system. To purchase a support contract, please contact your original sales representative.

StatusCheck Quick Start Guide

This guide assumes that you have all of the components supplied with this system including a serial or USB cable, a Controller, at least one StatusCheck End Node, and a monitoring software installation disk.

To install this system you will need your own PC running Window 2000 (or above) that has a CD reader drive and also has at least one available serial or USB port. You will also need at least one machine or device that needs monitoring.

As an overview of the installation, you will mount StatusCheck End Nodes on the machines or devices that need monitored. Next, you will connect the Controller to the PC with a serial cable. You will then install the monitoring software on your PC. Next, you will configure the monitoring software to recognize the StatusCheck components in your system. After which, you will test the monitoring system.

1. Mount the StatusCheck End Nodes on the machines or devices that you want to monitor. Make a note of each StatusCheck End Node's ID so that you can configure the software that you will install in step 3. You can use the magnetic mounting option to place each StatusCheck End Node, see the *Hardware Operations Manual* for more details or for other mounting methods. Using the toggle switch on the bottom of the End Nodes, turn the units on before you mount them. When the units are turned on, you will see a light blink on the top of the End Nodes. Once the locations are verified, you may want to permanently mount the units and adjust the sleep time as desired. Please see the hardware manual for additional details on mounting and sleep time adjustments.
2. Insert the software installation disk in the CD drive of the PC. The installation software should autoloading, if it does not, run the executable file on the installation disk called SCCMS_X_XX_XXX.exe. (The X's are replaced by version numbers on the software CD.) Follow the installation instructions as they appear on the PC screen. Taking all the defaults will produce a functional system. Do not forget to remove the installation CD from the drive when this step is done.
3. Install the serial or USB cable between the Controller and the PC, see operators manual for Controller data interface details. Connect the line cord, supplied with the Controller, to line power. Turn the Controller's power switch on (to the right). The LED in the power switch will illuminate when power is applied

Note: The Controller, when interfaced with a PC, must be configured properly; open the hinged lid and ensure the Controller/Router switch inside the box is set to “Controller”. Close and secure the lid.

4. After step 3 is complete, double-click the StatusCheck icon that appears on the PC’s desktop.

(The icon will appear after the software installation step is completed.) A dialog box will appear telling you that your software needs configured. Click the **OK** button on the dialog box. A window with multiple tabs will appear. (See Figure 1.)



Figure 1

Select from the menu **File**, then select **Load Quick Start Options**. (See Figure 2.)


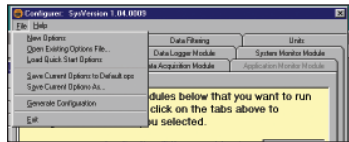


Figure 2

After the options have loaded, click the **Data Acquisition Module** tab. You will see five generic End Node ID’s, from 1 to 5, in the End Node table. These need to be replaced by the ID numbers specific to your system. (See Figure 3.)

Figure 3

5. Select the row with End Node ID 1. Click the **Replace** button. A dialog box will ask you for the new End Node ID. Enter the ID from one of the End Nodes you installed in step 1. If you have installed more End Nodes, repeat this step for each End Node using rows with End Node IDs 2, 3, and so on. If there are rows present that do not represent End Nodes you have placed in the field, double-click on the activation / deactivation field column for each non-functional End Node. The “**Yes**” field will change to “**No**”. Also, note that if more than five units are being installed, you must add rows to represent these additional units. See the *Software Operations Manual* for more details.

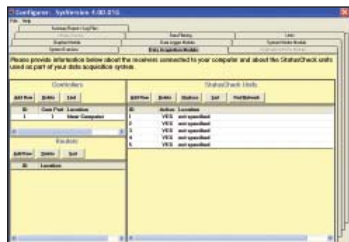

Note: Depending on the End Node version, it may have an eight digit serial number beginning with a 1 i.e. 10000157. All eight digits must be entered into the system to be valid. In all cases, the system will ignore any nonessential numbers.

6. Select the first row in the Controller table. Click the **"Delete"** button. Click the **"Find"** Button. A Notepad file is displayed showing all of the com ports scanned in finding the Controller. The Notepad display can show you information about your computer that can help diagnose problems with com ports. (See Figure 3.1.)


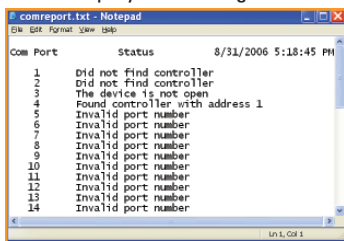


Figure 3.1

7. Cancel the Notepad display. The Controllers table should now contain the address and com port that your Controller is attached to. Select the location field and enter the location of the Controller for documentation purposes. If the Find procedure did not locate your Controller, add a row to the Controller table and fill in the fields accordingly.
8. To complete the software configuration select from the menu, **File** then **Generate System**. After the system has been generated, select from the menu, **File** and **Exit**.
9. To run the system, double-click the StatusCheck icon on the PC's desktop. This time the monitoring software will execute. The Controller window will be displayed. (See Figure 4 below.)

To see if all of your installed devices are working click the **Show** radio button under **System Monitor** on the Controller window. If you want to see the real-time data being gathered, click the **Show** radio button under **Grapher**. If you need additional information on how to configure or use the monitoring software, please refer to the *Software Operations Manual*. If some devices in your system are not working, see the trouble-shooting guide in the *Hardware Operations Manual*.

Figure 4



StatusCheck Operators Manual

System Overview:

This manual provides the necessary documentation for the installation and operation of the Timken StatusCheck™ Condition Monitoring System. The StatusCheck™ System is a low cost on-line monitor system for predicting the health & operating condition of machinery components.

The StatusCheck™ End Node is self-contained with battery powered sensors & electronics. The End Node attaches directly to the outer frame or housing of a machine. It utilizes wireless radio frequency (RF) communications to transmit sensed physical characteristics (vibration parameters and temperatures) of the machine. A transmission distance of up to 1 kilometer (1/2 mile) line of sight (open field) or 300 meters (328 yards) in a typical plant environment can be achieved. Multiple StatusCheck™ End Nodes (up to 100) can be in use on one or more machines all of which send their signals back to a Controller.

The Controller connects through a serial, USB, or Ethernet port to a PC that displays the data. The data consists of ambient temperature, probe temperature, and vibration parameters from a dual axis accelerometer in acceleration or velocity. The StatusCheck™ software is used for real time monitoring, data logging, and triggering alarms once the collected data exceeds user-defined thresholds indicated by yellow and red conditions.

By observing the data over time, the user can evaluate the operating condition of the machines. The data shown plotted below in Figure 1 versus time can be either operating temperature or a vibration measurement. The machine measurement trends increase as the machine approaches a failure mode. The yellow line indicates a warning condition whereas the red line represents a critical alarm condition. The goal is to detect conditions that require maintenance action before a problem becomes severe and causes unplanned machine downtime or collateral damage.

Applications:

The StatusCheck™ monitoring system is suitable for a wide range of applications. The machines that can be monitored include pumps, fans, rolls, gearboxes, motors, bearings or other industrial applications requiring the measurement of steady-state temperature and vibration.

Figure 1: Operation of StatusCheck™

How it Works:

The StatusCheck™ System collects temperature and vibration signals for 1-second period during a transmission cycle.

The vibration signal consists of 4096 data points over this time interval. The vibration

data is then statistically parameterized into 5 main statistical readings for each accelerometer axis. This parameterized data along with the temperature readings is transmitted to a Controller, which connects to a PC for analysis. The StatusCheck™ real-time tracking software compares the parameterized data to adjustable user defined thresholds to trigger alarms. This technique allows easy interpretation of a machine's operating condition over time.



It is important to note that this system will not indicate the exact system problem only that a problem exists. A more advanced diagnostic system can then be used once a problem has been identified. This system is fully turn-key and installs quickly with minimal required training for a simple assessment of a machine's operating condition.

System Components:

At a minimum, the system is composed of (1) Controller, (1) End Node, and (1) Software package. Routers may be required to extend the range from the End Node(s) to the Controller. The system can be composed of a maximum of (100) End Nodes per Controller. Mounting fittings, mounting plates, spare o-rings, cabling, and spare batteries are also available from Timken. Contact your Timken representative to obtain these items.

End Node:


The StatusCheck™ End Node operates at in the 2.4 GHz ISM band and is direct sequence spread spectrum. There are many benefits of using a spread spectrum transmission scheme. The StatusCheck™ device complies with FCC and EU based RF requirements and will typically not interfere with other wireless devices.

Testing has been successfully performed in plant environments without significant loss of data. Transmission distance is decreased while data loss is increased with obstructions and noise interference.

Figure 2 below shows the StatusCheck™ End Node and a listing of the main components.

Figure 2:

StatusCheck™ End Node

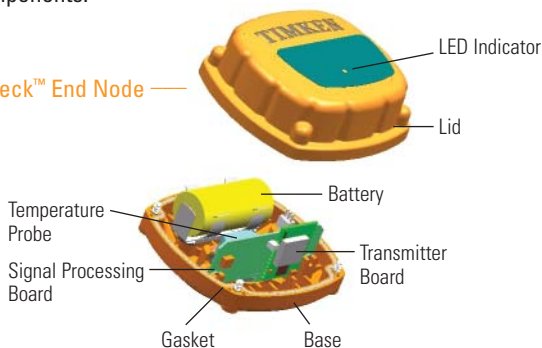

Accelerometer Type and Measurement Axes:


The accelerometer is a dual axis, 18G, cantilevered beam, MEMS device and is located on the center post of the End Node. The accelerometer is used for sensing mechanical vibrations. The two axes of measurement are referenced in Figure 3.

Figure 3: Vibration Sensing Axis Designation

Data Collection Intervals:

Five different data collection intervals are available for use with this product. For example, a 15-second data collection interval denotes that once every 15 seconds the End Node will be activate and collect 4096 data points over an approximate 1 second period, then parameterize and transmit data prior to returning inactive. A 60-second data collection interval denotes that once every 60 seconds the End Node will be activate and collect 4096 data points over an approximate 1 second period, then parameterize and transmit data prior to returning inactive.

The data collection interval and environmental conditions will determine the life of the battery. The factory setting interval is every 15 seconds. It is recommended that you initially retain the factory setting for network configuration then switch to a longer data collection interval to conserve battery life.

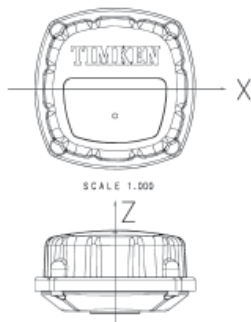

The six data collection intervals for the StatusCheck™ End Node and the approximate battery lives are depicted in the table below:

Interval Setting	Data Collection Interval	Approx. Battery Life
15 (Default Setting)	Every 15 seconds	4.5 Months
30	Every 30 seconds	9 Months
60	Every 60 seconds	1.5 Years
300	Every 5 minutes	3 Years
600	Every 10 minutes	4.5 Years

The data collection interval is adjusted using dip switches located on the signal processing board inside the End Node case. As shown in Figure 4, the dip switches are located on the left-hand side of the board and can be switched on or off using a pencil tip or small screwdriver (the ON position is up). These switches are adjusted according to the tables below to obtain the desired data collection intervals.

Caution: Turn the unit power OFF before adjusting the dip switches and use a non-conductive tool to adjust. Do not place unnecessary stress on the boards while moving the dip switches.

The 15-second interval setting is obtained by positioning the internal dip switches as follows:

Switch	1	2	3	4
On				
Off	X	X	X	X

The 30-second interval setting is obtained by positioning the internal dip switches as follows:

Switch	1	2	3	4
On	X			
Off		X	X	X

The 60-second interval setting is obtained by positioning the internal dip switches as follows:

Switch	1	2	3	4
On		X		
Off	X		X	X

The 5-minute interval setting is obtained by positioning the internal dip switches as follows:

Switch	1	2	3	4
On	X	X		
Off			X	X

The 10-minute interval setting is obtained by positioning the internal dip switches as follows:

Switch	1	2	3	4
On			X	
Off	X	X		X

Caution: Do not move switch 4 to the ON position (up); this position is used for calibration only.

Figure 4: StatusCheck
Dip Switch Location

Location of Dip Switches



End Node Accelerometer Offset Adjustment:

1. Turn Switch unit OFF (LED is not blinking).
2. Turn Switch 4 to the ON position. Remaining switches do not require adjustment.
3. Turn End Node power ON.
4. Within 5 seconds, position the End Node as shown in Figure 4.1 until the LED light flashes.
5. Turn End Node power OFF.
6. Turn Switch 4 to the OFF position.
7. While looking at LED light, turn End Node power ON. LED light should flash at least one time.
8. Offset adjustments are complete.

Figure 4.1: StatusCheck™ End Node Offset Adjustment Orientation



Temperature Probe Description:

The StatusCheck™ End Node has an external spring-loaded temperature probe that measures the surface temperature of the machinery to which it is attached. The RTD element, positioned at the probe tip, contacts the machine for quick temperature measurement.

The temperature probe is available in three different versions:

S = Standard (Magnetic flush mount or with use of tack weld plate)

L = Long Probe (for use with threaded nipples or for internal temperature measurements)

CXX = Custom (C followed by exact length from uncompressed tip to bottom of flange)

Note: The custom length option gives customers the ability to extend the range of the probe to contact internal interfaces of a monitored machine. This feature can be used to obtain bearing cup OD temperatures as well as other important internal temperature values. Temperature probe length is specified when placing a StatusCheck™ End Node order.

Mounting Methods:

The StatusCheck™ End Node attaches externally to the frame of the monitored machine. End Node mounting must not interfere with normal machine operations.

The StatusCheck™ End Node can be mounted at any location along the machinery frame or housing but should be positioned to be as close as possible to the source of vibration for best results. Mounting the unit as near as possible to the source of vibration provides the best signal.

The StatusCheck™ End Node can be permanently or temporarily secured to the monitored machine. The magnet mounting allows movement of the End Node to other locations for quick testing, however the recommended mounting methods are the threaded nipple or tack weld plate. Threaded mounting options are shown on Figure 5.

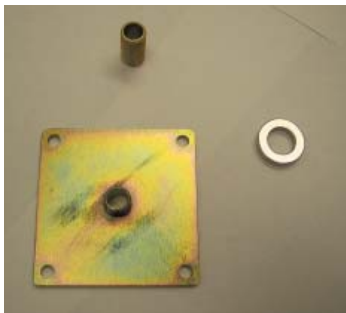


Figure 5: Threaded Mounting Options

Installation of the End Node:

The End Node can be mounted to a machine using the magnet, the threaded nipple, or tack weld plate. Testing has shown that the use of threaded mounting results in improved accuracy of high frequency vibration measurement, therefore the threaded mount method is recommended.

Caution: the magnet pull force is 110 N (25 lbs.), which may not be sufficient to hold the End Node in place on vibrating machinery. This may create an overhead/drop hazard.


Threaded mounts are available in 16M threaded fittings or plates that are tack-welded or riveted to the machine. If the plate is used, it should be rigidly attached to a relatively flat portion of the machine surface. When using the threaded mount, a torque of 3.95Nm (35 in-lbs.) will yield accurate measurements. Torque in excess of 3.95Nm (35 in-lbs.) may damage unit housing.

The End Node can be mounted in any orientation. The End Node axes should be parallel to the desired measurement axes. Refer to Figure 3 for

End Node axes orientation. The Z-axis is parallel to the direction of the temperature probe. The X-axis is positioned along the direction of the word “Timken” shown on the End Node case. For tracking purposes, the customer should also keep track of the mounting location of each unit so that this information can be entered into the software package.

End Node Power:

Located on the bottom of the End Node is an ON/OFF toggle switch that must be flipped for transmissions to commence. Note that a red LED light on top of the End Node blinks after each transmission. The first communication occurs upon Power ON.

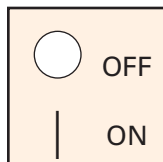

End Node Battery Replacement:

1. The StatusCheck™ Software will give notification that an End Node has a low battery (on initial indication of battery low, there will be several weeks until the End Node will stop operating).
2. Remove the End Node from the machine.
3. Turn the End Node off.
4. Take to unit to a clean environment and wipe off the exterior prior to opening the cover.
5. Open the End Node by loosening 4 cross tip screws visible from the bottom housing.
6. Remove the C-sized battery and dispose of in accordance with local procedures.
7. A 3.0 VDC Lithium Battery must be used. (see fig. 6 for proper orientation)
8. Replace the cover making sure the housing gasket.
9. Power the End Node on and verify that the unit LED flashes at least once.
10. Re-install End Node on monitored machine.



Figure 6: StatusCheck End Node Battery Orientation

RF Network Overview:

The StatusCheck™ system uses Radio Frequencies, RF, to transmit the data from the End Nodes to the data collection computer. The network uses IEEE 802.15.4 radios with Timken designed network software. The radios operate

in one of 16 channels between 2.400 and 2.483 GHz and use Direct Sequence Spread Spectrum, DSSS. The system is designed to form point to multi-point networks or cluster tree networks. The network is self forming and requires minimal actions by the customer.

The minimum hardware required to form a network are end nodes, a controller and a computer for data collection and storage. The point to point network will work as long as all end nodes are within transmission distance of the controller. Routers, sometimes called repeaters, can be added to the network to increase the distance from the controller to an end node. The routers allow a branch structure to be added to the network with the end nodes attaching to the network along the branches formed by the routers.

Network Set-Up:

The network is auto configuring. Turn on the controller. Turn on the end nodes. End nodes that require a router will not be received. Add routers until all end nodes are received.


The StatusCheck Controller:

The StatusCheck™ Controller is packaged in a box with dimensions of 18 x 23 x 15 cm (7 x 9 x 5 inches) and is shown in Figure 7 below. The box is IP67 rated so that it can be mounted in harsh environments. It can be configured for RS-232, USB, or Ethernet data link. A power line and a data cable connect to the Controller. No external antenna is allowed.

Figure 7: StatusCheck Controller —

Controller:

The controller is the device that gathers the data from the End Nodes and transfers it to a PC running the StatusCheck™ software. The device in Figure 7 can function as a Controller or a Router Node. ***In order to use the device as a Controller, open the hinged lid and set the Controller/Router switch inside the box to “Controller”.*** Close and secure the lid.

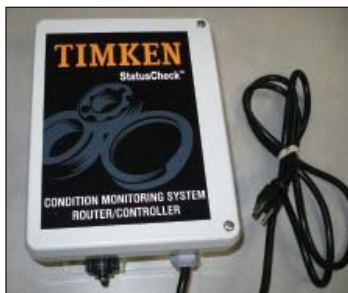

The Controller, supplied in AC and DC versions, connects to an appropriate power source. Located on the bottom of the Controller is an ON/OFF toggle switch that must be flipped to the right for power ON. (See Figure 7.1.) Note that a green LED light in the power switch will illuminate when power is applied, indicating that the Controller is ready to receive End Node signals. In order to verify that signals are being received, the Controller

must be connected to a PC using one of the data interface options (See sections below.) The maximum USB cable length is 3 meters (9 feet) and the maximum RS-232 cable is 15 meters (45 feet). If using Ethernet option, use an RJ-45 Ethernet cable. The StatusCheck™ software package must be installed prior to viewing the real time End Node data on the PC. A description and explanation of the software is included elsewhere in this manual. Please refer to the *Software Operating Manual*, included with the software purchase, for further details on operation of the software.

Figure 7.1: StatusCheck Controller Bottom View

Controller Interfacing - RS-232:

The customer only needs to connect an RS-232 cable between the Controller and the PC that runs the StatusCheck™ Software.

Controller Interfacing - USB:

Before connecting the Controller to the PC, put the StatusCheck™ software installation disk into PC's CD drive.

The software installation disk contains the driver for the USB interface. Run the StatusCheck™ installation. The USB driver is installed as part of the StatusCheck™ installation procedure. Then, connect a USB cable between the Controller and the PC that runs the StatusCheck™ Software. If the driver is installed properly, the computer should indicate that a new device was found and is operating properly.

Controller Interfacing - Ethernet:

The instructions for installing the Ethernet interface are beyond the scope of this manual and can be found on the StatusCheck™ Software Installation disk under the “docs” directory entitled “**Installing the Ethernet Interface**”. However, the general steps in the installation procedure are as follows:

1. Obtain a static TCP/IP address from your system administrator.
2. Install the Lantronix Device Installer software on the StatusCheck™ PC.
3. Configure the Ethernet device using the Lantronix Device Installer.
4. Install the Lantronix Redirector software.
5. Run the Redirector software to assign the TCP/IP address to a virtual com port on the StatusCheck™ PC.



Using Router Nodes:

The Router Node is a device that is used to extend the range of the radio messages sent from the End Nodes to the Controller. The Router receives radio messages from the End Nodes and transmits them toward the Controller. ***In order to use the device as a Router, open the hinged lid and set the Controller/Router switch inside the box to "Router". (See Figure 7.)*** Close and secure the lid.

The Router, supplied in AC and DC versions, connects to an appropriate power source. Located on the bottom of the Router is an ON/OFF toggle switch that must be flipped to the right for power ON. (See Figure 7.1.) Note that a green LED light in the power switch will illuminate when power is applied, indicating that the Router is ready to receive End Node signals.

In order for the Router to be effective, it must be within RF range of the End Nodes it services as well as within range of the Controller. If the Router is not in range of the Controller it must be in range of another Router that is in range of the Controller. The Router indicates that it is not in range of the Controller by flashing its power switch LED. When the Router is within range, it stops flashing the LED and is continuously lit.

You can determine if the End Node signals are traveling through the Router to the controller by viewing the System Monitor display in the StatusCheck™ software. If the signals are not being delivered through the Router, the System Monitor display will indicate that the End Nodes that the Router services are not working. Move the Router or add more Routers to your system if the End Node signal is not reaching the Controller.

You can use the battery power supplied with the Router while moving it into its best RF reception position. After the best RF position is determined, the customer should wire the Router to the appropriate main power supply.

Installation Instructions for Router/Controller Equipment:

Router/Controller units are supplied in AC or DC voltage supply versions. The units are supplied with a USB, EIA232, or Ethernet port available on the bottom exterior of the unit. A power switch with light indicator is located on the bottom of the unit.

Locate the unit in a position to receive RF signals from the End Nodes and other Router/Controllers as required. The batteries installed in the Router/Controller can supply power while finding a good mounting position for the unit. Mount the unit on a flat vertical surface using the bolt holes on the flanges of the plastic enclosure. The communication port, power switch, and power cord should be towards the floor.

Open the case to ensure the router/controller switch is set for the function required for your installation. Controllers are attached to a computer and control the radio network. Routers route messages between the end nodes and the controller and do not require connection to a computer. Remove the three AA batteries in the upper right hand corner of the router/controller to prevent leakage. Close the lid and tighten the screws on the Router/Controller cover.

Note: Batteries are installed to aid in deploying the router/controller in a network. The batteries are not intended for daily use or as a backup power source. Replace with AA Alkaline cells if required.

AC units are single phase AC and can be plugged into an available outlet. Turn on using the lighted switch on the bottom of the unit.


Caution: Disconnect the mains before servicing the router/controller.

DC units must be connected to a customer supplied DC power source, 18-36 VDC, using cable acceptable to local and national electric codes.

Failure to follow directions specified by the manufacturer may reduce the protection provided by unit.

Specifications

AC Powered Units

Supply	Voltage	100-240 V 
	Frequency	47-63 Hz
	Current	0.5A

DC Powered Units

Supply	Voltage	18-36 V 
	Current	0.5A

AC/DC Powered Units

Environment	Max Temp IP65 rated	+85 Degrees Celcius
-------------	------------------------	---------------------

Cleaning and Decontamination

To clean, use a cleaning compound compatible with corrosion resistant hot compression molded fiberglass reinforced polyester. Do not spray high pressure water stream directly on the Router/Controller.

Maintenance and Inspection:

There is no maintenance schedule for the Router/Controller. Units should be inspected for damaged housings and damaged power cords. If either condition exists, remove power from the unit and correct the problem, i.e. replace the power cord or replace the Router/Controller.

Note: This standard applies to equipment to be employed in accordance with ANSI/NFPA 70, National Electrical Code (NEC); designed to be installed in accordance with the Canadian Electrical Code (CEC), Part I, CSA C22.1, and CSA C22.2 No. 0; or designed to comply with both the NEC and CEC.

Timken StatusCheck Software:

The Timken StatusCheck™ software is a user-friendly, window-based package used to trend temperature and vibration data for the purpose of monitoring the health of industrial machinery. A wireless End Node sends data from the machine being monitored to the Controller, which is connected to a PC via a data interface. Timken StatusCheck™ software is fully OPC compliant.

The Timken StatusCheck™ software is used for real time monitoring, data logging, and triggering alarms once customer-defined thresholds are exceeded. Alarms can generate e-mail messages that may then be routed to pagers, cell phones or PDA's for maintenance notification.

Description of Parameterized Data:

The following parameterized data is collected:

- Z-Axis Acceleration: Mean, Peak, Standard deviation, Kurtosis
- Z-Axis Velocity: RMS
- X-Axis Acceleration: Mean, Peak, Standard deviation, Kurtosis
- X-Axis Velocity: RMS
- Ambient Temperature (Located inside enclosure on signal processing board)
- External Probe Temperature (Located at tip of spring loaded probe)

The software includes a date/time stamp for each data point received

Description of Vibration Parameters:

Refer to Figure 8 for a visual description of the vibration parameters.

The mean signal indicates the orientation of the StatusCheck™ unit

relative to gravity. The mean signal will not change even as the monitored machine enters fault condition. A mean signal of -1 to +1 G is expected.


The Peak signal is the highest level signal recorded during data collection, and is measured in G's. This is a key parameter that will show substantial increases as the monitored machine enters fault condition. Only the single largest data point taken from all the samples is used to determine this value. Note also that peak is the distance from the mean axis and is a positive reading.

The Standard deviation is calculated over the data collection interval, and is measured in G's. This parameter increases as the monitored machine enters fault condition.

The Kurtosis is an indication of the sharp peaks in the distribution of the collected data, and is unit less. This parameter is a more sensitive indicator of failure mode. This parameter is often useful in detecting impulsive forces even when superimposed on stronger, lower frequency components.

RMS Velocity is derived from acceleration data using an FFT and calculated as an RMS value.

Figure 8: StatusCheck™ Vibration Parameters

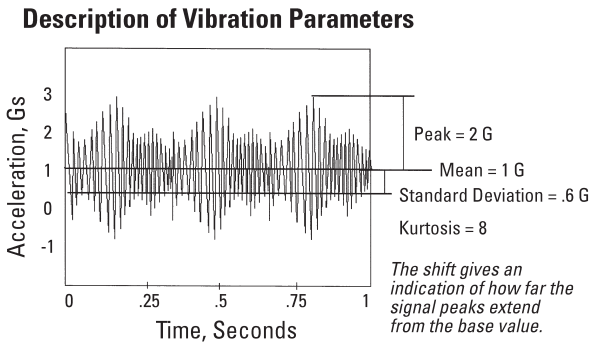

Approximating Alarm Settings:

For a first approximation of alarm settings, gather data for baseline measurements on normally operating machines and record the readings over about 20 minutes of data collection. Average the baseline data. Set the vibration warning threshold to be 1.5 times the baseline average and

set the vibration critical thresholds to be 2.0 times the baseline average for the alarm conditions. These guidelines were established based on previous lab and field test results and should be customized for specific customer applications.

The customer establishes alarm thresholds after determining the baseline measurements of a normally operating system. For example, if normal operation of a machine is at a peak acceleration of 2 G's with a standard deviation of 0.6, a kurtosis of 8, a velocity RMS of 7.62mm/s (.3"/second) , and a temperature of 82.2°C (180°F), then alarm points could be set based on these readings as follows:

Peak Acceleration Warning Threshold = 1.5 x average = 3G

Peak Acceleration Critical Threshold = 2 x average = 4G

Standard deviation Warning Threshold = 1.5 x average = .9 G

Standard deviation Critical Threshold = 2 x average = 1.2 G

Kurtosis Warning Threshold = 1.5 x average = 12

Kurtosis Critical Threshold = 2 x average = 16

Velocity RMS Warning Threshold = 1.5 x average = 11.4mm/s

Velocity RMS Critical Threshold = 2 x average = 15.2mm/s

Temperature Warning Threshold = 1.2 x average = 102°C (216° F)

Temperature Critical Threshold = 1.5 x average = 132°C (270° F)

It is important to note that these alarm threshold guidelines are possible starting points.

Care and experience are required to determine thresholds. The goal is to identify problems before causing damage to equipment and/or material is process.

Trending software shows data points versus time to determine variations from the established baseline. Additional trending information can be found in the *StatusCheck™ Software Manual*.

System Software Installation Requirements:

Windows 2000, NT, or XP

Free Hard Drive Disk Space of 50 MB

Accessible RS-232, USB, or Ethernet

Installation of the Software:

The software installation disk is setup to be as user friendly as possible. Once the installation disk is accessed, a series of questions are asked to allow the user to obtain the proper installation. For most customers, the default values can be selected. Reference the *StatusCheck™ Software Manual* and *Quick Start Instructions* for further details.

Using End Node ID Numbers to Configure Software:

In order to configure the Software the customer will need enter the serial numbers of all the End Nodes that you plan to install. The serial numbers can be found on the part number label located on bottom of the End Node Base. The customer will also need to enter the location of each End Node to facilitate tracking.

Product Technical Specifications:

End Node:

Size	10 x 10 x 6 cm (4 x 4 x 2.2 in)
Operating Temp	-40° - 85°C (-40° - 185°F)
Accelerometer	18G MEMs cantilevered beam 2 –axis accelerometers 0 to 1.5 KHz bandwidth, 57mV/g Sensitivity Parameterized data – Acceleration - Mean, Peak, Standard Deviation, Kurtosis and Velocity - RMS
Temperature Reading	RTD Contact probe, spring loaded Standard probe - low thermal mass temperature range -40° to 177°C (-40° - 350°F) Stainless probe - -40° - 232°C (-40° - 450°F) Ambient temperature with Board mounted IC -40° - 85°C (-40° - 180°F) +/- 2°C
Housing	Celcon plastic shell with gaskets, Splash resistant IP67
Battery	C-cell Lithium Ion primary cell
Battery Life	1 year to 4.5 years
Transmission Rates	15 Sec, 30 Sec, 1 Min, 5 Min, 10 Min
Mounting	M16 threaded nipple, magnetic mount with magnet pull force of 110 N (25 lbs.)

Radio

Type	IEEE 802.15.4 compliant DSSS system
Operating Frequency	2.400-2.483 GHz in 16 channels at 5MHz spacing starting at 2.405GHz with 2MHz bandwidth Channel 15, 2.425GHz factory default
Range	Line of Sight(LOS) - 1Km (1mile) In plant – 300m typical (328 yards)

Router/Controller

Size	18 x 23 x 15 cm (7 x 9 x 5 in)
------	--------------------------------

Operating Temp	-40° - 85°C (-40° - 185°F)
----------------	----------------------------

Power	AC 95-260 VAC, 47-63 Hz DC 18-36 VDC
-------	---

Communication	USB EIA232 Ethernet
---------------	---------------------------

Operating Temp	40° to 85° C (-40° to 185° F)
----------------	-------------------------------

Power	AC 95-260 VAC, 47-63 Hz DC 18-36 VDC
-------	---

Communication	USB EIA232 Ethernet
---------------	---------------------------

Troubleshooting:

End Node does not turn on:

- Be sure toggle switch is in the “on” position
- Replace battery
- Check for loose connection between battery and the electronics board
- If none of these turns the unit on then the unit is damaged and should be replaced.

Loss of Signal - An End Node signal can be lost due to numerous reasons:

- Since the End Nodes are battery operated, they will have a limited life. After a certain predictable period of operation these batteries will need replaced. This will become apparent from the software, as a warning signal will be generated to give the user fair warning that the End Node battery voltage is low. This will allow a convenient scheduling of the battery replacement prior to the loss of the RF signal.
- If the End Node is located too far away from the Controller (especially if not line of sight). In this case, an additional Router could be added to the system or the placement of the original Controller could be revised to re-acquire the signal.
- Damaged End Node. The End Node assembly can be damaged due to numerous reasons including over-heating, compromised seals, loose battery wire, smashed, etc. If this occurs the current End Node will need replaced with a new one and the PC software will need to be informed of the switch so as to look for the new End Node ID number rather than the old one. The software allows for switching out damaged End Nodes with new ones using the “**Replace Option**” and also allows for the addition of new End Nodes in the StatusCheck™ Software configuration routine.

Data Distortion - If the data that is being collected seems distorted it could be caused from the following reasons:

- If water contamination gets internal to the End Node. Check to see if water has gotten internal to the packaging.
- Operations around a large source of EMF that interferes with some or all of the transmitted data. If the data looks suspect, try moving the

unit to a new location to see if the problem still exists.

Inability to catch problems

- Be sure that the thresholds are set appropriately for each given operating condition.
- Be sure that the proper selection of the accelerometer internal to the End Node is being used for each operating condition.
- Be sure the End Node is mounted properly and in a location as close to the source of vibration (or heat) as possible.
- Determine if the machine that is being monitored fails in a way that can be monitored by these devices.

Too many false alarms

- Be sure thresholds are set properly.
- Be sure that the transient conditions of the application are accounted for. This might mean the use of trending more data points or by adjusting the number of consecutive data points that must surpass the threshold prior to alarming.

Controller not receiving

- Be sure the router/controller switch, located inside the box, is set to **“controller.”**
- Be sure line power is connected to the controller, move power switch, located on bottom of controller, to the on (right) position. A green LED should illuminate with power on.
- Check for proper data interface connections. If using USB cable as a data interface, be sure drivers are installed.
- Be sure the proper Com Port is selected in the StatusCheck™ software, see step 6 in the quick start guide.

TIMKEN

Where You Turn

Bearings • Steel •
Precision Components • Lubrication •
Seals • Remanufacture and Repair •
Industrial Services

www.timken.com

StatusCheck™ is a trademark of
The Timken Company

Windows® and Windows NT®
are registered trademarks of
The Microsoft Corporation

Timken® is the registered trademark of
The Timken Company.

©2006 The Timken Company
Printed in USA
100 10-06-29 Order No. 10077